THESE INSTRUCTIONS SHOULD NOT BE FAXED OR REPRODUCED ON A DIGITAL COPIER. AMERICAN WOODMARK CORPORATION PROVIDES THESE INSTRUCTIONS ON AN "AS IS" BASIS AND DISCLAIMS ANY AND ALL LIABILITY FOR ANY INACCURACIES, OMISSIONS OR TYPOGRAPHICAL ERRORS CAUSED BY ANY THIRD PARTY'S EQUIPMENT. When you use these instructions, you are consenting to be bound by the provisions in this paragraph. These instructions provide an illustrative method for installing American Woodmark Corporation ("AWC") cabinets and/or accessories. AWC's instructions are not intended to address every possible contingency that might be encountered during installation or to endorse the use of any particular tools. AWC HEREBY EXPRESSLY DISCLAIMS ALL LIABILITY FOR ANY CLAIMS FOR INJURY OR DEATH RELATED TO OR BASED UPON THE USE OF THESE INSTALLATION INSTRUCTIONS AND ANY INSTALLATION INSTRUCTIONS OTHERWISE PROVIDED BY AWC.

Installation Instructions

Read carefully before you begin adjustments

L-Brackets – Drawer Front/Door Adjustments

These instructions advise how to adjust drawer front(s) or door(s) that are attached to a drawer body with L-Brackets.

Product Use

The L-brackets, plastic caps and screws are used to attach doors/drawer fronts to a drawer body.

Tools Needed

- Phillips Screwdriver
- Thin Putty Knife
- Safety Glasses


Procedure


BASE CABINETS:

For all assembly steps, safety glasses are recommended. The doors/dfs are attached to the drawer body with L-brackets, which have been covered with plastic caps (Fig.1).

NOTE: Depending on the size of the drawer body, there may be one or two L-brackets installed on each side.

Remove the caps using a thin putty knife by carefully prying them up and out. Then loosen the installation screws with the Phillips screwdriver so the door/df can be repositioned. Loosen the brackets on the left and right side of the door/df and drawer body (Fig. 2).

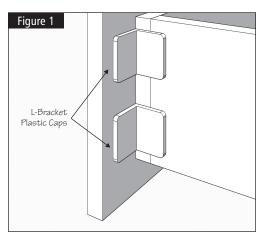

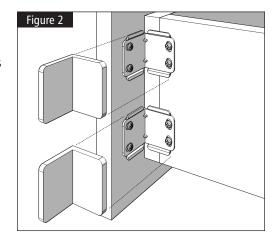

- The L-brackets have oval shaped holes so the door/df should be able to slide side to side and up and down. In order to adjust this door/df, it is suggested that two people are available; one person can adjust and hold the door/df in position and the second person can retighten the screws (Fig.3).
- After the door/df is repositioned and all of the screws are tightened, place the plastic cover caps back on the door/df as shown in Figure 1.

